

Print Removal

Using a hair dryer gently lift one corner of the mounted print and pull up as you move the hair dryer back and forth along the print to page line. You'll notice that the adhesive is removed with the print leaving the page useable for another print with spray adhesive. It's important to apply the adhesive to the back of the print – DO NOT attempt to spray the album. Please note: the original print is pretty much destroyed; this is designed to save the album and the rest of the photographs that are already mounted.